

# WARRANTY DATE CODE REFERENCE GUIDE

# Hunter®

RESIDENTIAL & COMMERCIAL IRRIGATION  
*Built on Innovation®*



## STATEMENT OF WARRANTY Hunter Residential & Commercial Irrigation

Hunter Industries Incorporated (“Hunter”) warrants the following products to be free of defects in materials or workmanship under normal use in landscape irrigation applications for the specified period of time outlined below from the original date of manufacture:

<b>ONE YEAR</b>	<b>ROTORS</b>	SRM	<b>MICRO</b>	Micro Sprays, PLD Fittings, Rigid Risers, Air Relief Valves, RZB
<b>TWO YEARS</b>	<b>ROTORS</b>	HCV, PGJ, PGP®-ADJ	<b>CONTROLLERS</b>	BTT, HC, HPC, NODE, NODE-BT, Pro-C® Families, Pro-HC, PSR, ROAM, X2™, XC Hybrid, X-Core®, WAND
	<b>SPRAYS</b>	HSBE Family, PS Ultra Family, SJ, FLEXsg	<b>SENSORS</b>	HC Flow Meter
	<b>NOZZLES</b>	AFB, MSBN, PCB, PCN, Spray Nozzles	<b>MICRO</b>	ACZ, Accu Sync, Eco-Indicator, IH Risers, MLD, Multi-Port Emitters, Multi-Purpose Box, PCZ, PLD-LOC Fittings, Point Source Emitters, RZWS, Senninger Regulators, Tubing
	<b>VALVES</b>	PGV Family	<b>TOOLS</b>	SpotShot
<b>THREE YEARS</b>	<b>CONTROLLERS</b>	EZ Decoder System, ROAM XL	<b>MP ROTATOR®</b>	All
<b>FIVE YEARS</b>	<b>ROTORS</b>	PGP Ultra, I-20, I-25, I-40, I-50, I-80, I-90 Families	<b>CENTRAL</b>	IMMS Central Control Products, A2CWIFI, A2CLAN, A2CLTE, LANKIT, WIFIKIT
	<b>SPRAYS</b>	Pro-Spray®, Pro-Spray PRS30, Pro-Spray PRS40	<b>SENSORS</b>	Clik Sensors, HFS, WFS, MWS, Solar Sync®
	<b>VALVES</b>	HQ, IBV, ICV	<b>MICRO</b>	Eco-Mat®, Eco-Wrap®, HDL, HDL-COP, ICZ
	<b>CONTROLLERS</b>	ACC/ACC2 families, HCC, ICC2, ICD Decoders, ICD-HP, I-Core®/DUAL® Families		

If used for agricultural applications, Hunter limits the warranty for its spray, rotator, and rotor products to a period of one (1) year from original date of manufacture. This agriculture limitation supersedes all other warranties expressed or implied.



 
[hunter.direct/warranty](https://hunter.direct/warranty)



All products currently under warranty are included in this guide. If you do not see the product you're looking for, it may no longer be under warranty. Learn more at [hunter.direct/discontinued](https://hunter.direct/discontinued)

# ROTORS

Hunter®

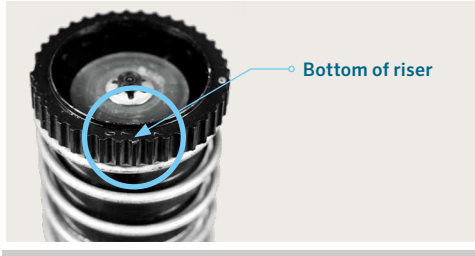

## I-20-SS, I-25, I-40, I-50

Date code is located on the bottom of the riser, removed from body.  
(yr/mo)

 
Warranty Period: 5 years



## I-80

Date code is located on the back of the riser, removed from body.  
(mo/yr)


Warranty Period: 5 years

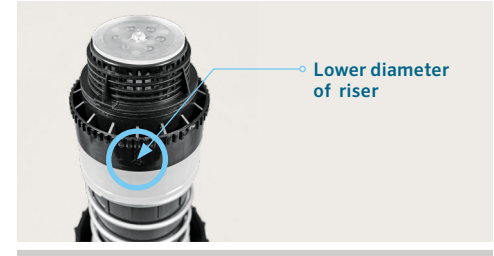

## I-90

Date code is located on the lower diameter of the riser.  
(mo/yr)

 
Warranty Period: 5 years

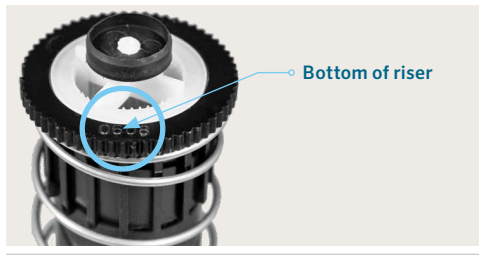

## PGJ, SRM

Date code is located on the bottom of the riser, removed from body.  
(yr/mo)

 Warranty Period: 1 and 2 years

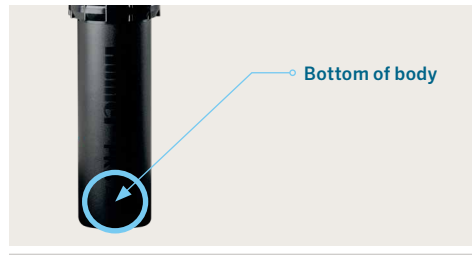

## PGP-04-PRB, I-20-PRB, PR-075

Date code is located on the bottom of the body.  
(yr/mo)

Warranty Period: 5 years



 
## PGP®-ADJ, PGP Ultra, I-20 Plastic

Date code is located on the nozzle housing.  
(yr/mo)

Warranty Period: 2 and 5 years

# MP ROTATOR® & SPRAYS

Hunter®

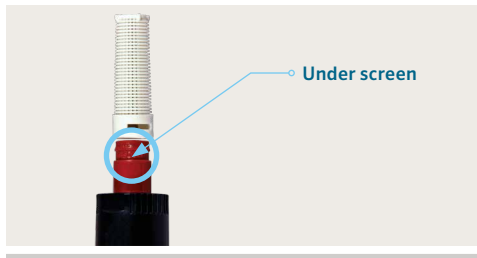

## MP Rotator

Date code is located under the screen.  
(mo/dy/yr)

 
Warranty Period: 3 years



## Pro-Spray®

Date code is located on the body cap.  
(q/yr)

Warranty Period: 5 years

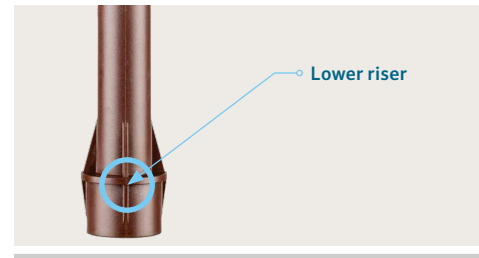

## PROS-00

Date code is located on the lower diameter of the riser.  
(q/yr)

Warranty Period: 5 years



## Pro-Spray PRS30

Date code is located on the body cap.  
(q/yr)

 
Warranty Period: 5 years



## Pro-Spray PRS40

Date code is located on the body cap.  
(q/yr)


Warranty Period: 5 years

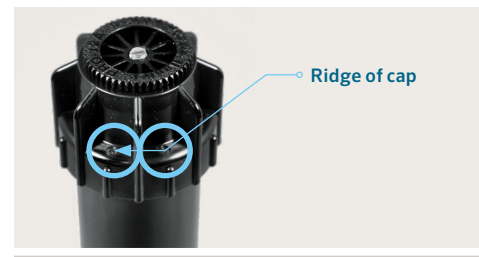

## PS Ultra

Date code is located in the ridges of the cap.  
(q/yr)

 
Warranty Period: 2 years

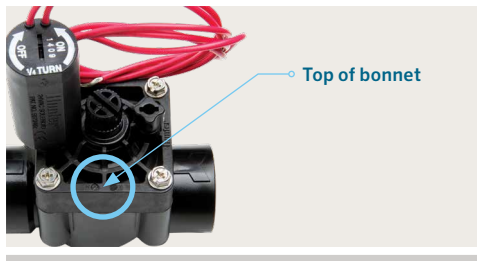

## 1" PGV

Date code is located on top of the bonnet.  
(mo/yr)

 
Warranty Period: 2 years

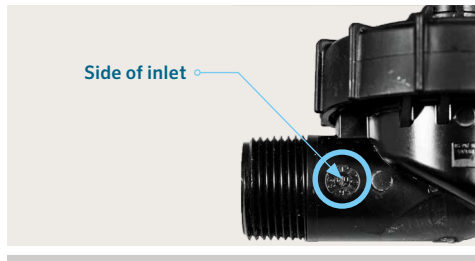

## PGV-JT

Date code is located on the side of the inlet.  
(mo/yr)

 
Warranty Period: 2 years

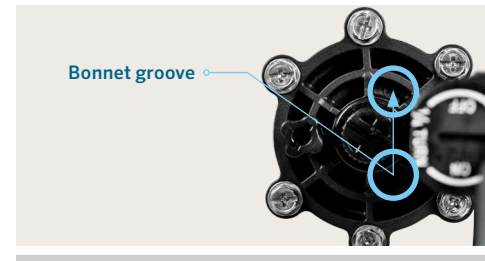

## PGV-ASV

Date code located in the bonnet groove.  
(mo/yr)

 Warranty Period: 2 years

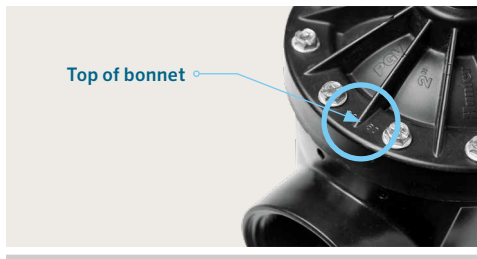

## 1½", 2" PGV

Date code is located on top of the bonnet.  
(mo/yr)

 
Warranty Period: 2 years



## IBV

Date code is located on top of the bonnet.  
(mo/yr)

Warranty Period: 5 years

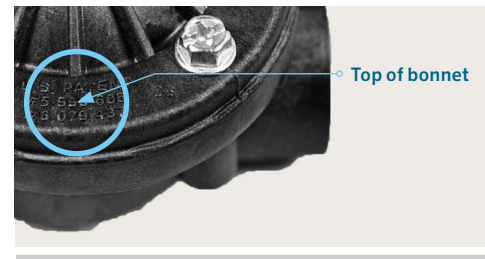


## ICV

Date code is located on top of the bonnet.  
(mo/yr)

Warranty Period: 5 years

# VALVES & ACCESSORIES

 Hunter®

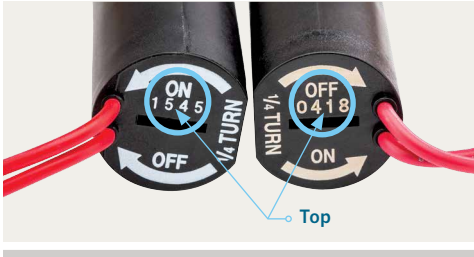

## Solenoid

Date code is located on the top.  
Below ON (yr/wk), below OFF (mo/yr)

 
Warranty Period: 5 years



## Accu Sync®

Date code is located on lower diameter near the thread end.  
(mo/yr)

Warranty Period: 5 years

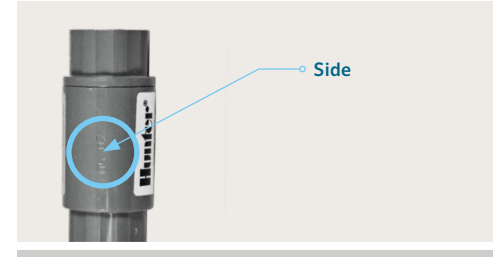

## HCV

Date code is located on the side.  
(mo/yr)

 
Warranty Period: 2 years



## Quick Coupler

Date code is located on top of the valve.  
(mo/yr)

Warranty Period: 5 years

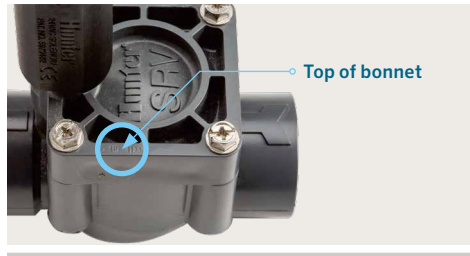

## SRV

Date code is located on top of the bonnet.  
(mo/yr)

Warranty Period: 2 years



## ACC2 Modules

Date code is located on the bottom or back side.  
(mo/yr)

Warranty Period: 5 years



## ACC2 Communication Modules

Date code is located on the back side.  
(yr/mo/dy)

 
Warranty Period: 5 years



## ACC Communication Modules

Date code is located on the back side.  
(mo/yr)


Warranty Period: 5 years

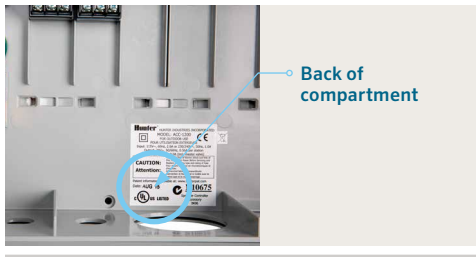

## ACC Compartment

Date code is located in back of the wire compartment.  
(mo/yr)

 
Warranty Period: 5 years

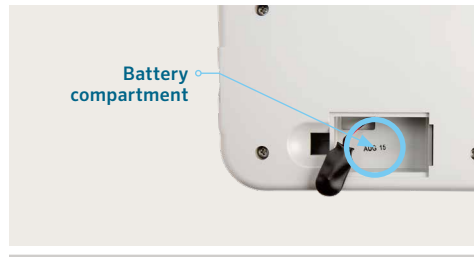

## ACC Facepack

Date code is located in the battery compartment.  
(mo/yr)

 Warranty Period: 5 years

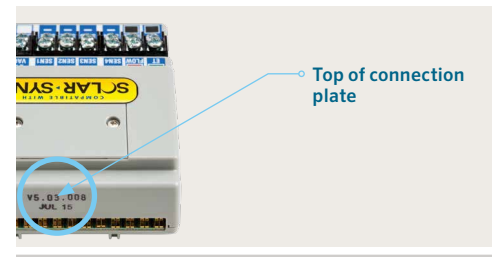

## ACC Master Module

Date code is located on top of the connection plate.  
(mo/yr)

Warranty Period: 5 years



# CONTROLLERS

Hunter®



## ACC2 Compartment

Date code is located on the right wall of the wiring compartment.

(mo/yr)

Warranty Period: 5 years



## ACC2 Facepack

Date code is located on the back side.

(mo/yr)

Warranty Period: 5 years



## ADM-99

Date code is located on the back side.

(mo/yr)

Warranty Period: 5 years



## BTT

Date code is located on the back side.

(mo/yr)

Warranty Period: 2 years

 


## DUAL-48M Module

Date code is located on the back side.

(mo/yr)

Warranty Period: 5 years

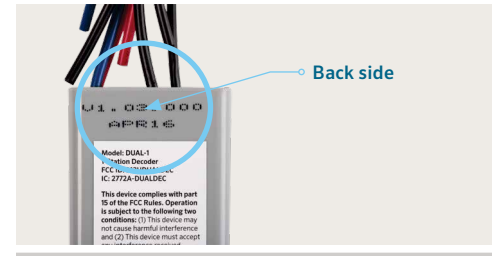

## DUAL® Decoder

Date code is located on the back side, or on the bottom.

(mo/yr)

Warranty Period: 5 years



# CONTROLLERS

 
Hunter®



## EZ-1 Decoders

Date code is located on the bottom.  
(mo/yr)

Warranty Period: 3 years

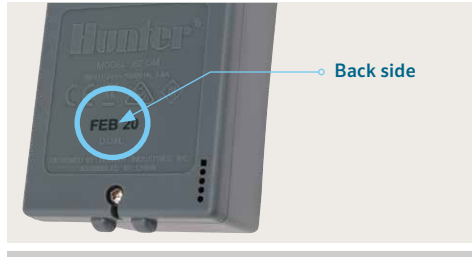

## EZ-DM Module

Date code is located on the back side.  
(mo/yr)

Warranty Period: 3 years



## HC

Date code is located on the back side.  
(mo/yr)

 
Warranty Period: 2 years



## HCC Facepack

Date code is located on the back side.  
(mo/yr)

Warranty Period: 5 years

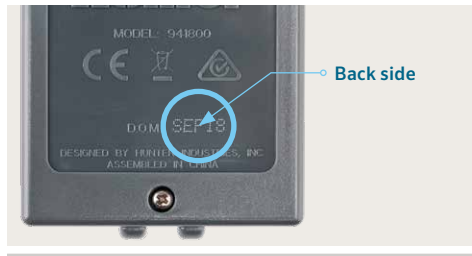

## HCC Power Module

Date code is located on the back side.  
(mo/yr)

Warranty Period: 5 years



 
## HPC (Pro-C Hydrawise) Facepack

Date code is located on the back side.  
(mo/yr)

Warranty Period: 2 years

# CONTROLLERS

Hunter®

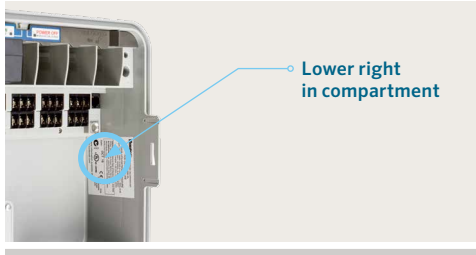


## I-Core® Compartment

Compartment date code is located in the lower right wire compartment.

(mo/yr)

 Warranty Period: 5 years

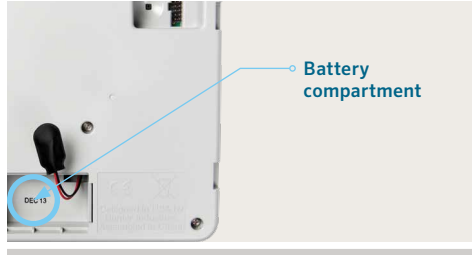

## I-Core® Facepack

Facepack date code is located in the battery compartment.

(mo/yr)

Warranty Period: 5 years



## I-Core Module

Date code is located on the bottom or back side.

(mo/yr)

Warranty Period: 5 years

 


## ICC2 and HCC Compartment

Date code is located on the back right wall of the wiring compartment.

(mo/yr)

Warranty Period: 5 years

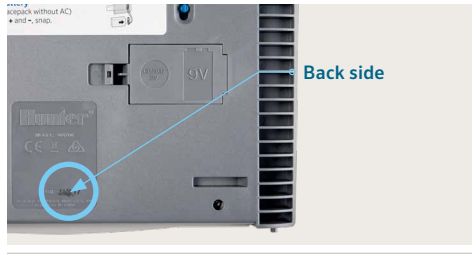


## ICC2 Facepack

Date code is located on the lower back side.

(mo/yr)

 Warranty Period: 5 years

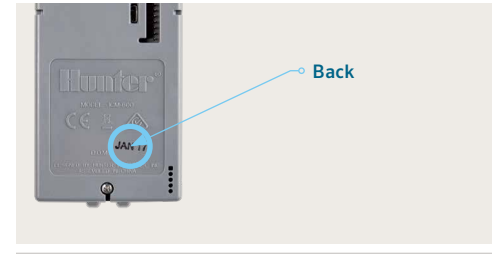


## ICC2 Module

Date code is located on the bottom or back side.

(mo/yr)

 Warranty Period: 5 years

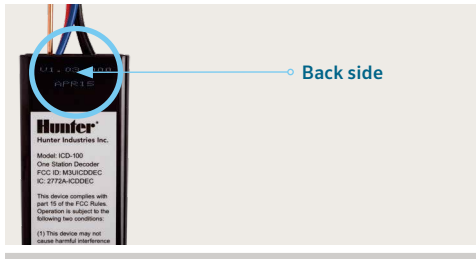

## ICD Decoders

Date code is located on the back side, above approvals label or on the bottom.

(mo/yr)

Warranty Period: 5 years

 


## ICD-HP

Date code is located on the back side.

(mo/yr)

Warranty Period: 5 years

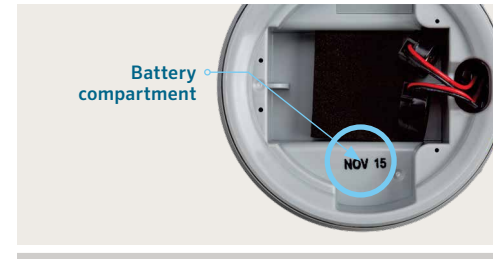


## NODE

Date code is located in the battery compartment.

(mo/yr)

 Warranty Period: 2 years

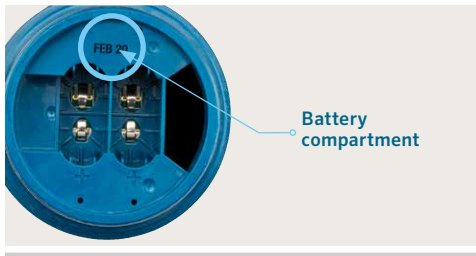


## NODE-BT

Date code is located in the battery compartment.

(mo/yr)

 Warranty Period: 2 years

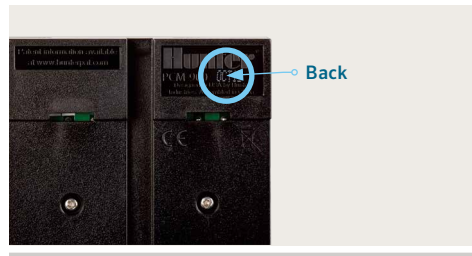


## PCM Module

Date code is located on the bottom or back side.

(mo/yr)

 Warranty Period: 2 years

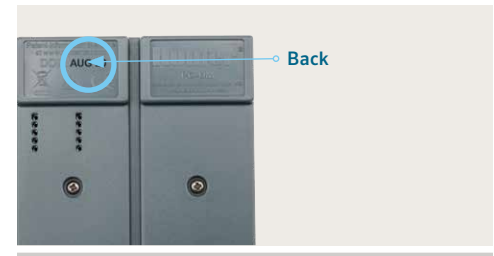

## PC-DM Module

 
Date code is located on the bottom or back side.

(mo/yr)

Warranty Period: 3 years

# CONTROLLERS


Hunter®

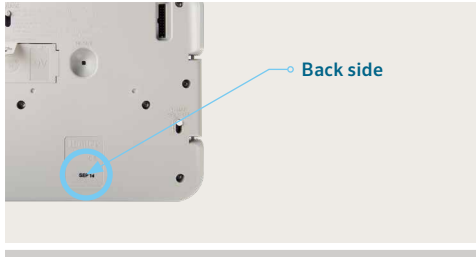

## Pro-C®, PCC Facepack

Date code is located on the back side.  
(mo/yr)

 Warranty Period: 2 years

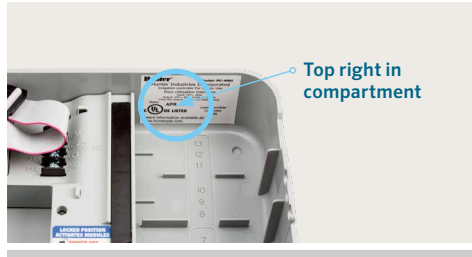

## Pro-C®, PCC, HPC Controller

Date code is located in the top right wire compartment.  
(mo/yr)

Warranty Period: 2 years



## Pro-HC

Date code is located on the bottom right wall of the wiring compartment.  
(mo/yr)

Warranty Period: 2 years



## PSR

Date code is located on the inside cover.  
(mo/yr)

Warranty Period: 2 years



## RAD-3

Date code is located on the back side.  
(mo/yr)

Warranty Period: 5 years



## ROAM Receiver

Date code is located on the back side.  
(mo/yr)

Warranty Period: 2 years

# CONTROLLERS

Hunter®



## ROAM Transmitter

Date code is located in the battery compartment cover.  
(mo/yr)

 
Warranty Period: 2 years



## ROAM XL Receiver

Date code is located on the back side.  
(mo/yr)


Warranty Period: 3 years

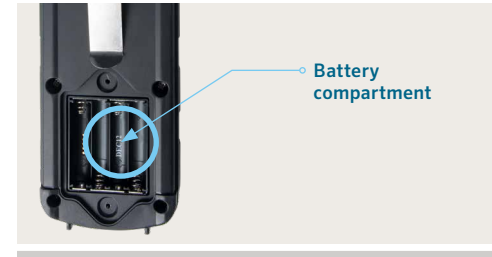

## ROAM XL Transmitter

Date code is located in the battery compartment.  
(mo/yr)

 
Warranty Period: 3 years

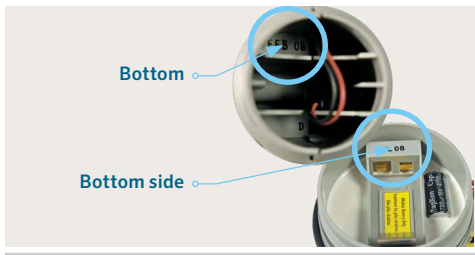

## WVP, WVC

Date codes are located in the battery compartment.  
(mo/yr)

 Warranty Period: 2 years

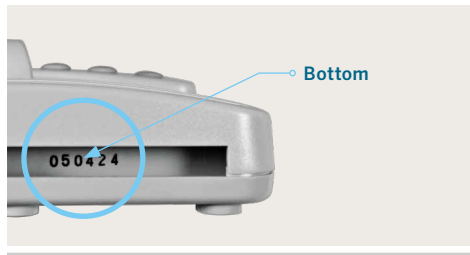

## X-Core® Indoor

Date code is located on the bottom of the controller.  
(mo/yr)

Warranty Period: 2 years



 
## X-Core®, XC Hybrid

Date code is located in the lower right area of the wiring compartment.  
(mo/yr)

Warranty Period: 2 years

# CONTROLLERS

Hunter®

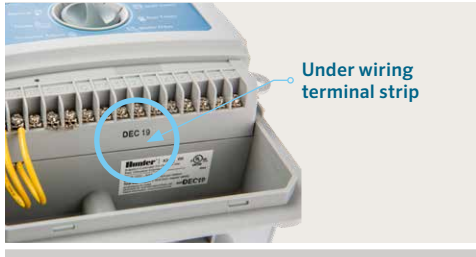

## X2™

Date code is located under the wiring terminal strip.  
(mo/yr)

 
*Warranty Period: 2 years*



## WAND

Date code is located on the backside of the module.  
(mo/yr)


*Warranty Period: 2 years*

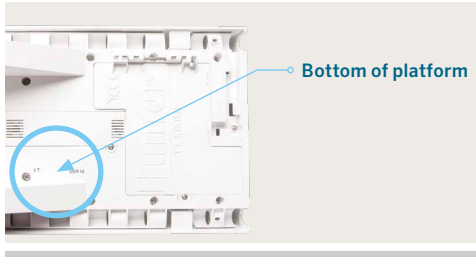

## ET Sensor

Date code is located on the bottom of sensor platform.  
(mo/yr)

 
Warranty Period: 2 years

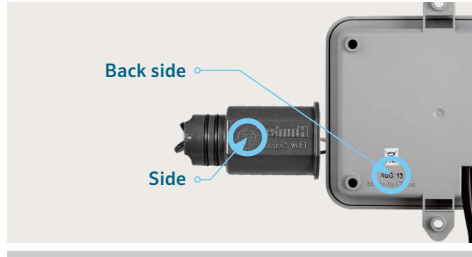

## Flow-Clik®, Flow-Sync®

Receiver date code is located on the back side. **Sensor** date code is located on the side.  
(mo/yr)

 
Warranty Period: 5 years

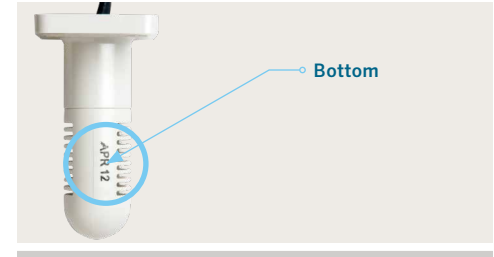

## Freeze-Clik®

Date code is located on the bottom of the sensor.  
(mo/yr)

 
Warranty Period: 5 years

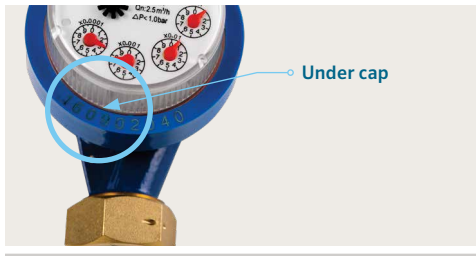

## HC Flow Meter

Date code is located under cap and around the meter lens.  
(yr/mo)

 
Warranty Period: 2 years

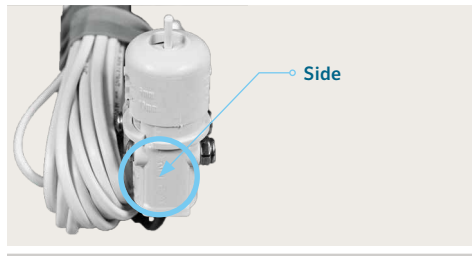

## Mini-Clik®

Date code is located on the side.  
(mo/yr)

 Warranty Period: 5 years

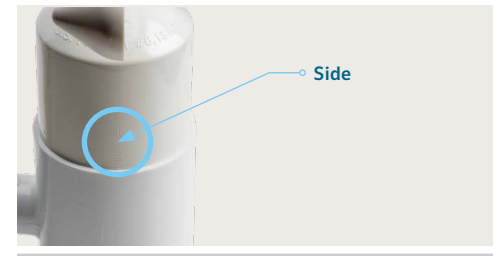


## MWS

Date code is located on the side.  
(mo/yr)

 Warranty Period: 5 years




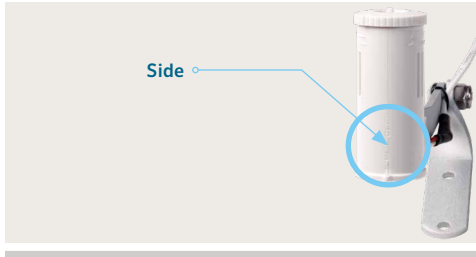

## Wired Rain-Clik®

Date code is located on the side.  
(mo/yr)

 
Warranty Period: 5 years

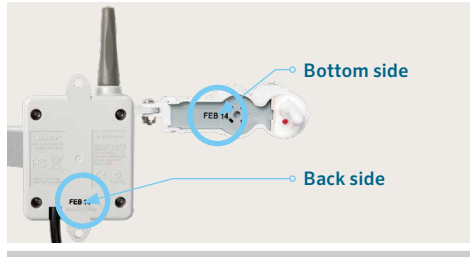

## Wireless Rain-Clik

Receiver date code is located on the back side. **Sensor** date code is located on the bottom.  
(mo/yr)

 
Warranty Period: 5 years

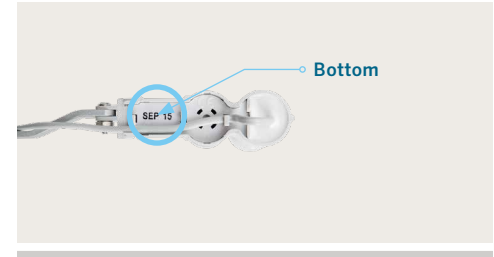

## Wired Solar Sync®

Date code is located on the bottom of the sensor.  
(mo/yr)

 
Warranty Period: 5 years

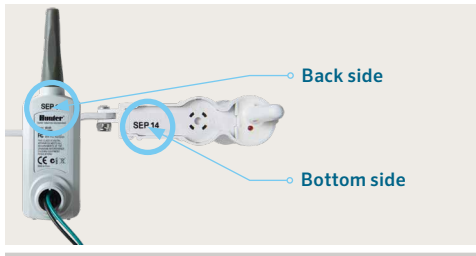

## Wireless Solar Sync

Receiver date code is located on the back side. **Sensor** date code is located on the bottom.  
(mo/yr)

 
Warranty Period: 5 years

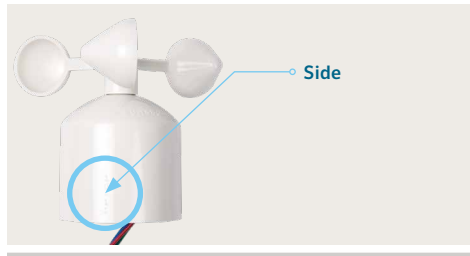

## Wind-Clik®

Date code is located on the side.  
(mo/yr)

 
Warranty Period: 5 years

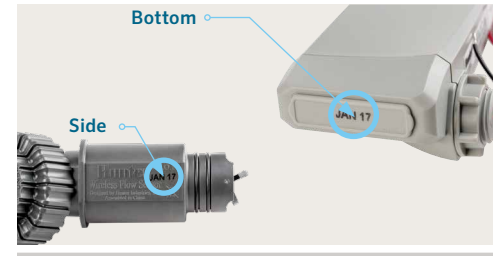

## Wireless Flow Sensor

Receiver date code is located on the bottom side. **Sensor** date code is located on the side.  
(mo/yr)

 
Warranty Period: 5 years

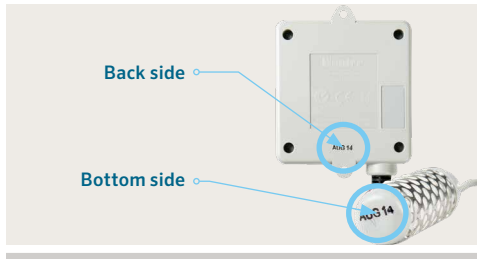

## Soil-Clik®

Receiver date code is located on the back side. Sensor date code is located on the bottom.  
(mo/yr)

 Warranty Period: 5 years

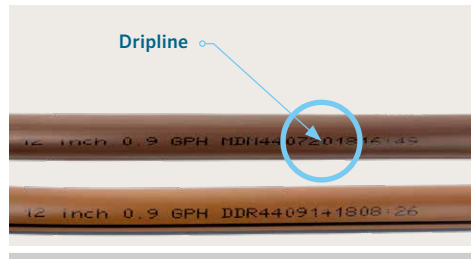

## HDL

Date code is located on the length of dripline.  
(mo/yr)

Warranty Period: 5 years

---

## HUNTER CUSTOMER SUPPORT

---

At Hunter, we've always believed the difference lies in providing world-class product support to make your job easier. When you need technical help, whether it's to ask a quick question or to get product-specific troubleshooting assistance, you can count on Hunter to provide the best support in the industry. Our knowledgeable experts are always available to help you.

### *Technical Support*

---

Contact us for support with all Hunter and FX Luminaire products. Both English- and Spanish-speaking representatives are available.

**Phone: 800-733-2823**

**Email: [support@hunterindustries.com](mailto:support@hunterindustries.com)**

**Hours: Monday-Friday, 6 a.m. to 4 p.m. PST/PDT, excluding holidays**

### *Online Product Support*

---

Visit our Support Library for instructional videos, owner's manuals, installation details, articles, and more.

Learn more at [hunterindustries.com/support](https://hunterindustries.com/support).

### *Customer Service*

---

Our dedicated Customer Service Representatives are available for assistance with product orders, order status, RMAs, and more.

Call us today at **800-383-4747**.

### *Hunter University*

---

The comprehensive online training programs available through Hunter University are designed to help you and your customers become familiar with Hunter products — for free! Many courses are also available in Spanish. Learn more at [training.hunterindustries.com](https://training.hunterindustries.com).

### *Hunter Preferred Program*

---

Your customers can earn points for purchasing Hunter and FX Luminaire products that can be redeemed for prizes, trips, credit, and more. Contractors and public agencies can enroll online at [preferred.hunterindustries.com](https://preferred.hunterindustries.com).

Questions about the program?

**Phone: 877-888-0167**

**Email: [hunter.preferred@hunterindustries.com](mailto:hunter.preferred@hunterindustries.com)**



Helping our customers succeed is what drives us. While our passion for innovation and engineering is built into everything we do, it is our commitment to exceptional support that we hope will keep you in the Hunter family of customers for years to come.

Gene Smith, President, Landscape Irrigation and Outdoor Lighting

**Website** [hunterindustries.com](http://hunterindustries.com)

**Customer Support** 800-383-4747

**Technical Service** 800-733-2823

#### **USA HEADQUARTERS**

1940 Diamond Street  
San Marcos, California 92078, USA  
TEL: 760-744-5240

#### **MEXICO MANUFACTURING**

*ISO 9001:2015 Certified*  
Calle Nordika #8615  
Parque Industrial Nordika  
Tijuana, B.C., Mexico CP, 22640  
TEL: +52 664-903-1300

#### **EUROPE**

Avenida Diagonal 523, 5o-2a  
Edificio Atalaya  
08029 Barcelona, Spain  
TEL: +34 9-34-94-88-81

#### **AUSTRALIA**

Suite 7, 202 Ferntree Gully Road  
Notting Hill, Melbourne  
Victoria 3168, Australia  
TEL: +61 3-9562-9918

#### **MIDDLE EAST**

P.O. Box 2370  
Amman, 11941, Jordan  
TEL: +962 6-5152882

#### **CHINA**

B1618, Huibin Office Bldg.  
No. 8 Beichen Dong Street  
Beijing 100101, China  
TEL: +86 10-84975146